


Product Assembly

5

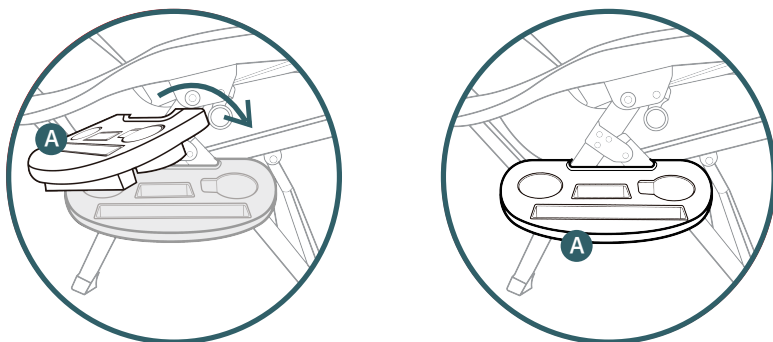

To attach the cup holder, simply attach it to the armrest by sliding it into the designated slot.

Note: Ensure the cup holder is removed before folding the chair.

Maintenance Tips

- **Cleaning:** Wipe the chair regularly with a soft, damp cloth to remove dust and dirt. For stubborn stains, use a mild soap solution and rinse thoroughly with clean water. Avoid using abrasive cleaners or chemicals, as they may damage the surface of the chair.
- **Inspection:** Periodically check the screws and connections to make sure they are tight. Tighten any loose screws as needed. Also, inspect the reclining mechanism for any signs of wear or damage. If you notice any issues, contact our customer service for assistance.
- **Storage:** If you need to store the chair for an extended period, make sure it is clean and dry. Store it in a cool, dry place away from direct sunlight and moisture. You can also cover the chair with a protective cover to prevent dust and damage.

Warnings

- Do not exceed the maximum load capacity of **200 kg (450 lbs)**.
- Avoid placing the chair on uneven, slippery, or unstable surfaces.
- Always supervise children and prohibit climbing on the chair.
- Keep away from open flames or high-temperature sources.
- For outdoor use, ensure the chair is fully dry before folding to prevent mold.

Comfort Anywhere, Anytime – Trust ATORPOK

CE ♻️ Made In China

ATORPOK

INSTRUCTION MANUAL

Zero Gravity Chair
with Canopy

Applicable Models: ZGC001 / ZGC002



atorpokus@outlook.com


We are available to assist you 7 days a week

Parts List

Part Number	Part Name	Quantity	Notes
A-001	Main Chair Body	1	Comes with cushion
B-001	Cup Holder	1	Fits both left and right armrests
C-001	Canopy	1	Adjustable, non-detachable
D-001	Headrest	1	Adjustable and detachable
E-001	User Manual	1	Includes assembly diagrams


Product Assembly

1

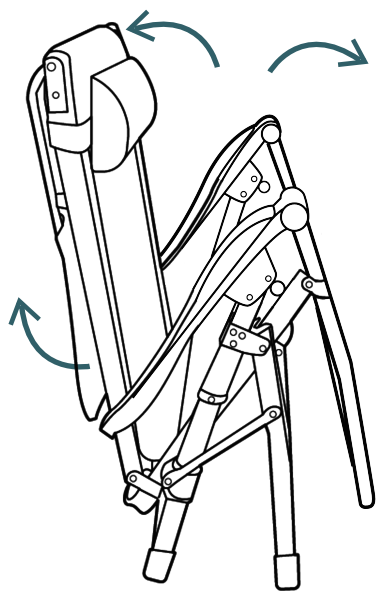

Flip the attached canopy over the backrest.


2

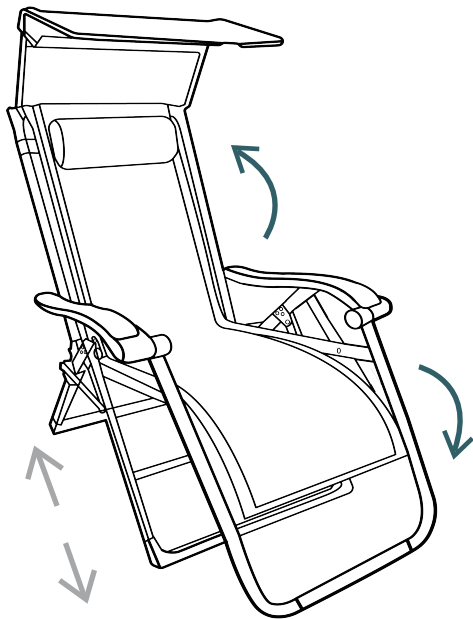

Pull open the chair to spread the legs.


Product Assembly

3

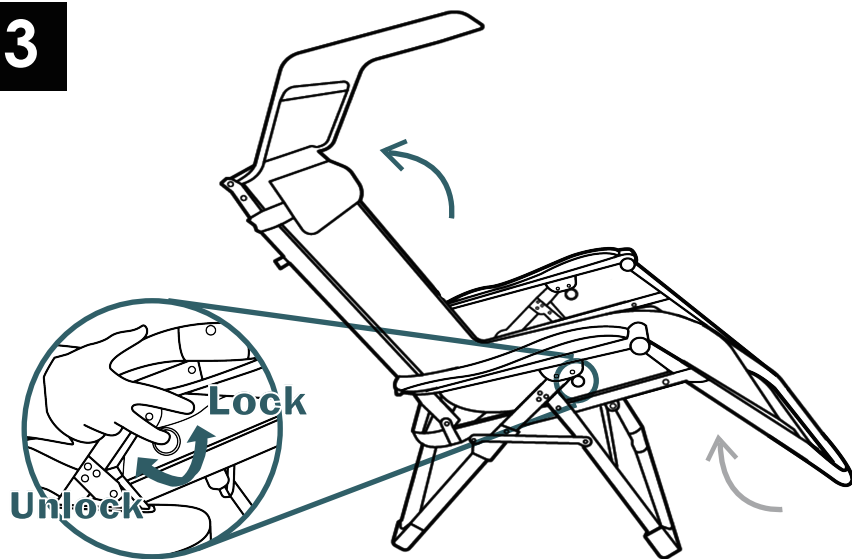

Unlock the latches on both sides downward, recline the chair, and then lock it into a fixed position by flipping the latches upward.

4

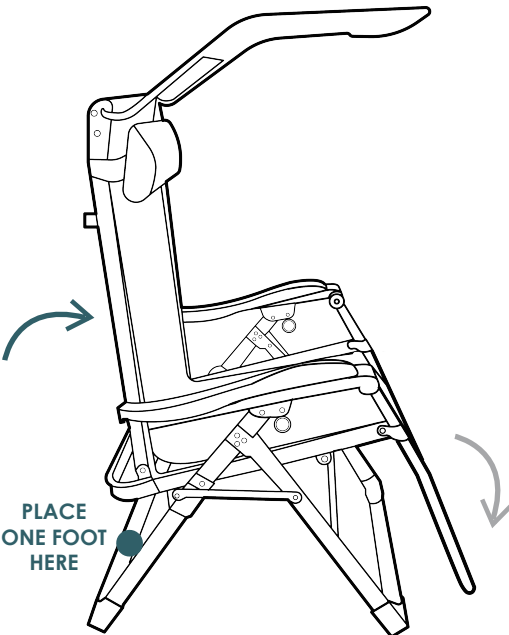

To return to an upright position, loosen the latches, place a foot on the back chair leg, and push the backrest upright.